


INSTALLATION INSTRUCTIONS

Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

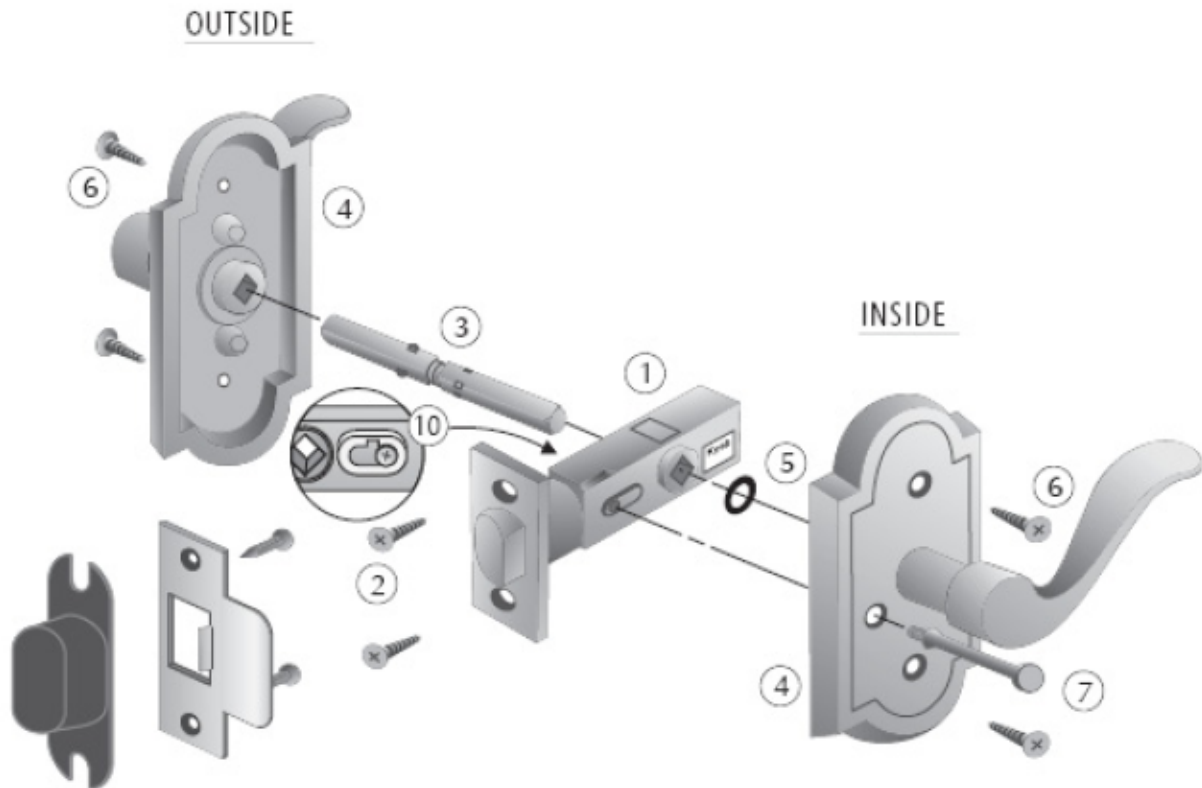

02 FUNCTION

LATCH:

- A. Insert the latch (1) into the edge of the bore and attach using screws (2). (Pre-drill for screws using a 1/8" drill bit.) Make sure the bevel on the latch tongue is facing the jamb. (The latch face is removable so that the bevel can be reversed to maintain the "up" position of the latch.)
- B. From inside the door, push the button (10) on the latch (1) to the outside and slip the white plastic oval ring over the button securing it with the small screw provided.
- C. Install the strike and dust box on the jamb. Pre-drill for screws as per latch.

INSTALL TRIM:

- D. Orient spindle (3) in the diamond position and push the grooved end through the latch (1) hub to the inside.
- E. Roll O-ring (5) onto the groove on the spindle. (If this is not done, the spindle can drift in the latch and cause lockout.)
- F. Install the outside and inside trim (4) onto the spindle (3).
- G. Screw in the privacy pin (7) through the inside plate.
- H. Making sure that the plates are parallel with the edge of the door, position inside & outside trims for free and smooth operation. Install the four wood screws (6) to affix the plates to the door. We recommend the use of a #5VIX bit to pilot the screw holes for these screws. (If you do not have one, use a 3/32" drill bit to pilot the holes.) Hand tighten the screws; a power driver may strip them.