


INSTALLATION INSTRUCTIONS

Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

03 FUNCTION ~ MULTI POINT WITH AMERICAN CYLINDER

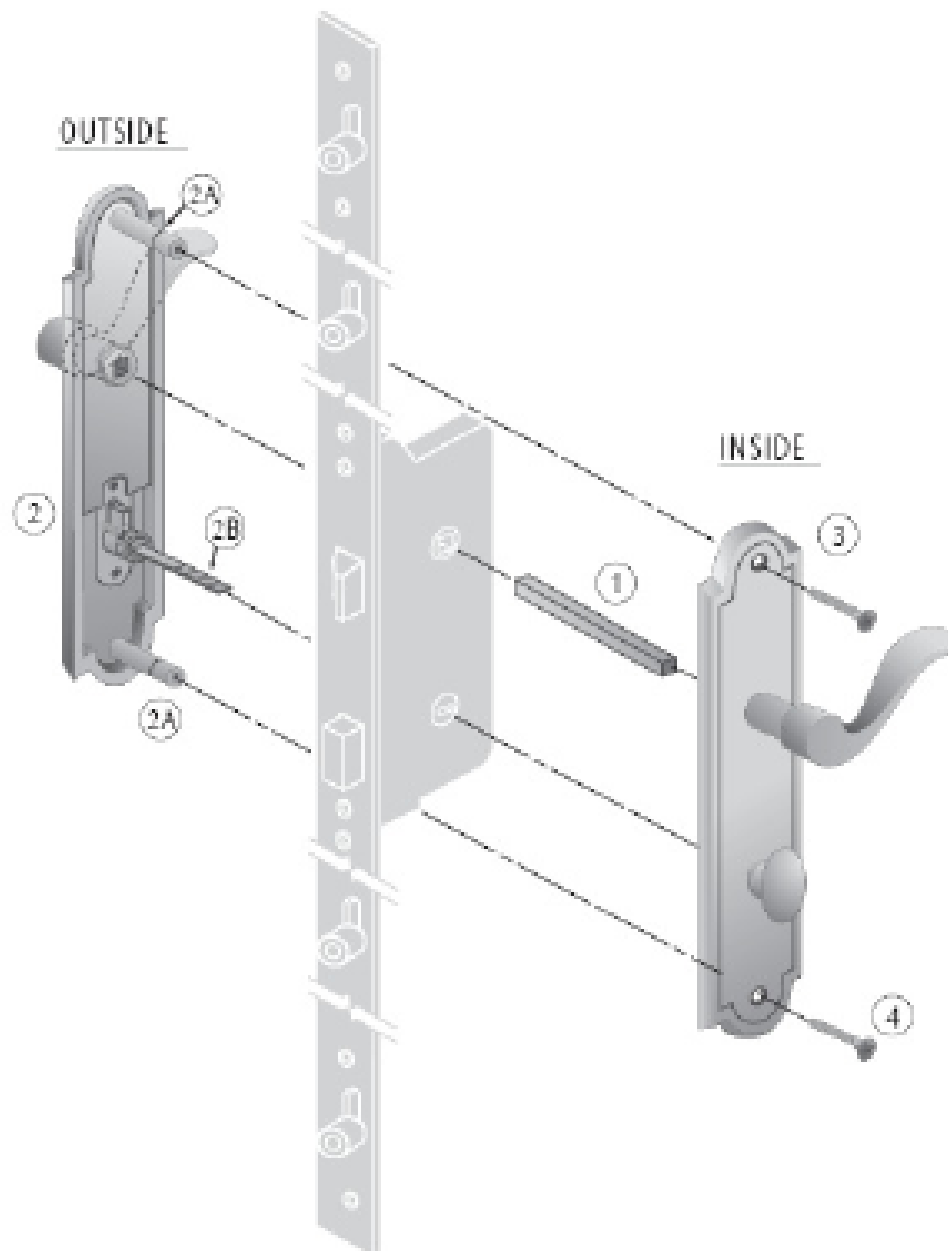



INSTALLATION INSTRUCTIONS

Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

03 FUNCTION ~ MULTI POINT WITH AMERICAN CYLINDER

Note : To ensure proper fit of trim to door, the door manufacturer must be specified when hardware is ordered.
The trim sets do not include the lock mechanism or strike.

- A. Install spindle (1) in square position into hub of multipoint mechanism (The mechanism is installed in the door by the door manufacturer.)
- B. Slide the outside trim (2) onto the door, sliding spindle (1) in the square position into the levers, the tailpiece (2B) into the lock hub and the threaded sleeves (2A) into the existing holes on the outside of the door. (If there is any interference when inserting the outside trim onto the mechanism, remove the trim and enlarge the holes in the door for the throughbolts.)
- C. Install the inside trim (3), inserting spindle (1) into lever. Thread machine screws (4) into threaded sleeves (2A).
- D. Align edge of plates parallel with edge of door. Position plates for free and smooth operation of levers and key cylinder, then tighten machine screws (4).