


INSTALLATION INSTRUCTIONS

Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

03 PROFILE FUNCTION ~ MULTI POINT LOCK

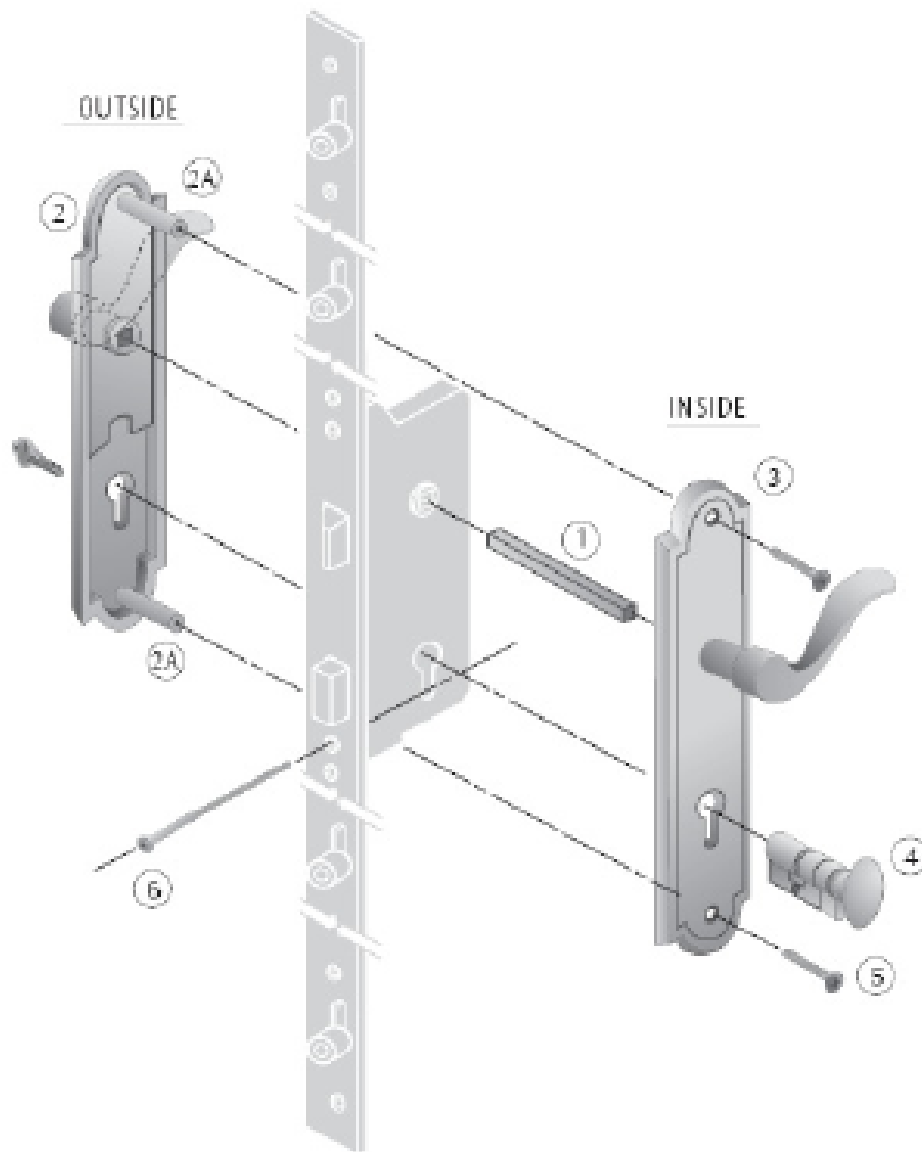

INSTALLATION INSTRUCTIONS

Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

03 PROFILE FUNCTION MULTI POINT LOCK

Note: To ensure proper fit of trim to door, the door manufacturer must be specified when hardware is ordered. The trim sets do not include the lock mechanism or strike.

TRIM:

- A. Install spindle (1) in square ■ position into hub of multipoint mechanism (The mechanism is installed in the door by the door manufacturer.)
- B. Slide the outside trim (2) onto the door, sliding spindle (1) in the square ■ position into the levers and the threaded sleeves (2A) into the existing holes on the outside of the door. (If there is any interference when inserting the outside trim onto the mechanism, remove the trim and enlarge the holes in the door for the throughbolts.)
- C. Inside Trim - Install inside trim (3) inserting spindle (1) into lever, again maintaining the square position of the spindle.
- D. Install the profile cylinder (4) through trim (3) into the lock mechanism.
- E. Install the long machine screw (6) into the edge of the door and thread into the profile cylinder.
- F. Align edge of plates (2 and 3) parallel with edge of the door. Position plates for free and smooth operation of the levers.
- G. Secure plates to door threading machine screws (5) into the threaded sleeves (2A).