


INSTALLATION INSTRUCTIONS

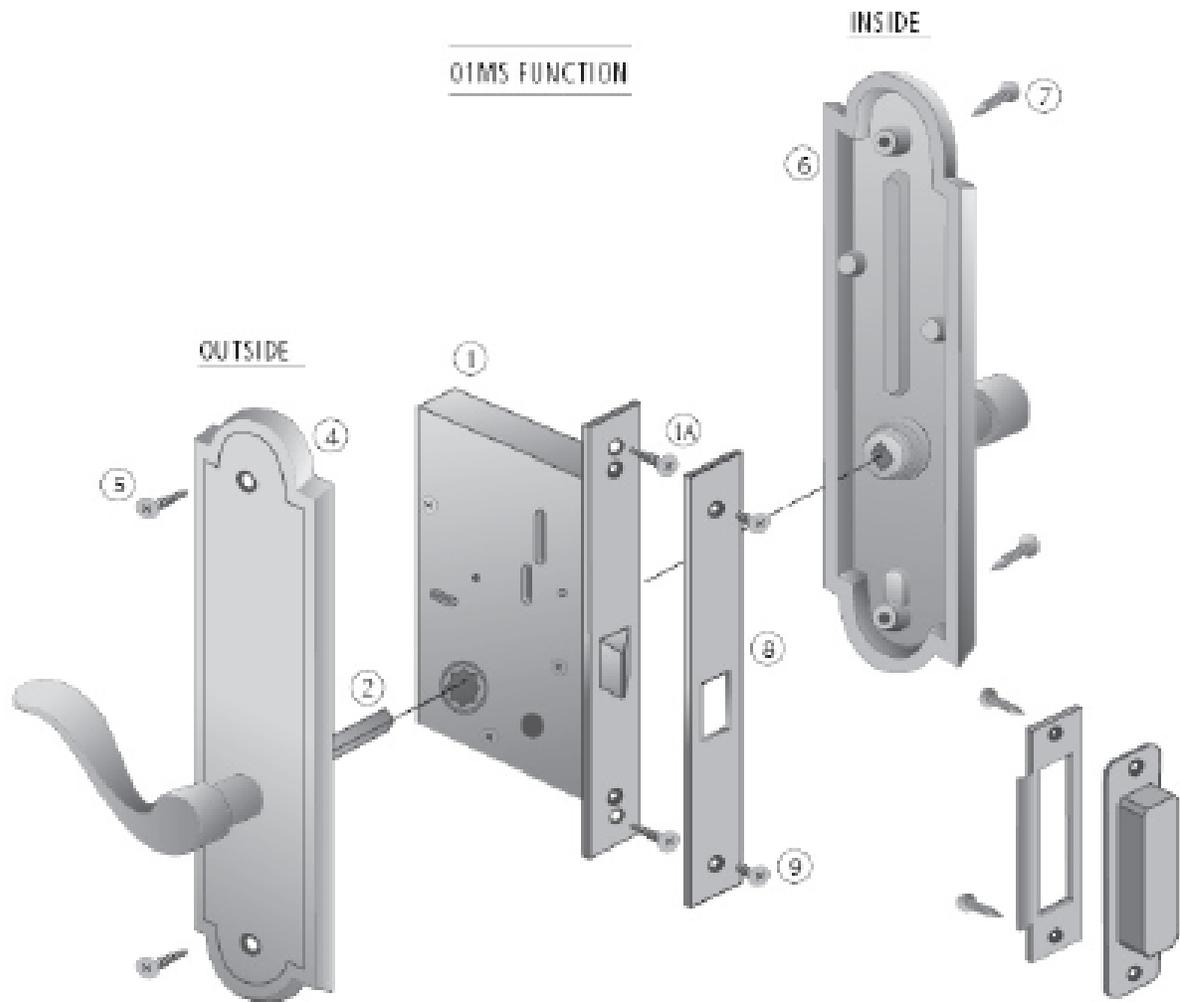

Seamless Transaction with Enhanced Product Features delivered on time and quality correct.



Corporate Address: 9546 Hwy 211 East - Aberdeen, NC 28315
Mailing Address: PO Box 367 - Aberdeen, NC 28315
Telephone: 866-635-7155
Website: www.longleafcollection.com
Made in the USA

INSTALLATION INSTRUCTIONS



Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

01MS FUNCTION

- A. Install the mortise box (1) using wood screws (1A), being careful that the box is properly aligned. Pre-drill for screws using a 1/8" drill bit.
- B. Slide the spindle (2), oriented in the diamond position, into the hub of the mortise box, centering in the hub.
- C. Apply the outside trim (4) to the door, sliding the knob or lever onto the spindle, maintaining the diamond orientation. Align the edge of the trim plate with the edge of the door, and position the trim for free and smooth operation of the mortise latch by knob or lever. Holding the trim plate in position, locate the pilot holes for the trim screws (5). We recommend the use of a #5VIX bit to pilot the screw holes. (If you don't have one, use a 3/32" drill bit.) Hand tighten the screws, as a power driver may strip them.
- D. Mount inside trim (6) by inserting spindle (2) into knob or lever, and aligning the edge of the trim plate parallel with the edge of the door. Position trim for smooth operation of mortise latch by knob or lever, and fasten to the door using screws (7). Pre-drill for screws as for outside trim. Hand tighten screws.
- E. Install the armor plate (8) to the face of mortise box, using small machine screws (9).
- F. Install the dust box and strike plate onto jamb. Pre-drill using a 1/8" drill bit.