


# INSTALLATION INSTRUCTIONS



Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

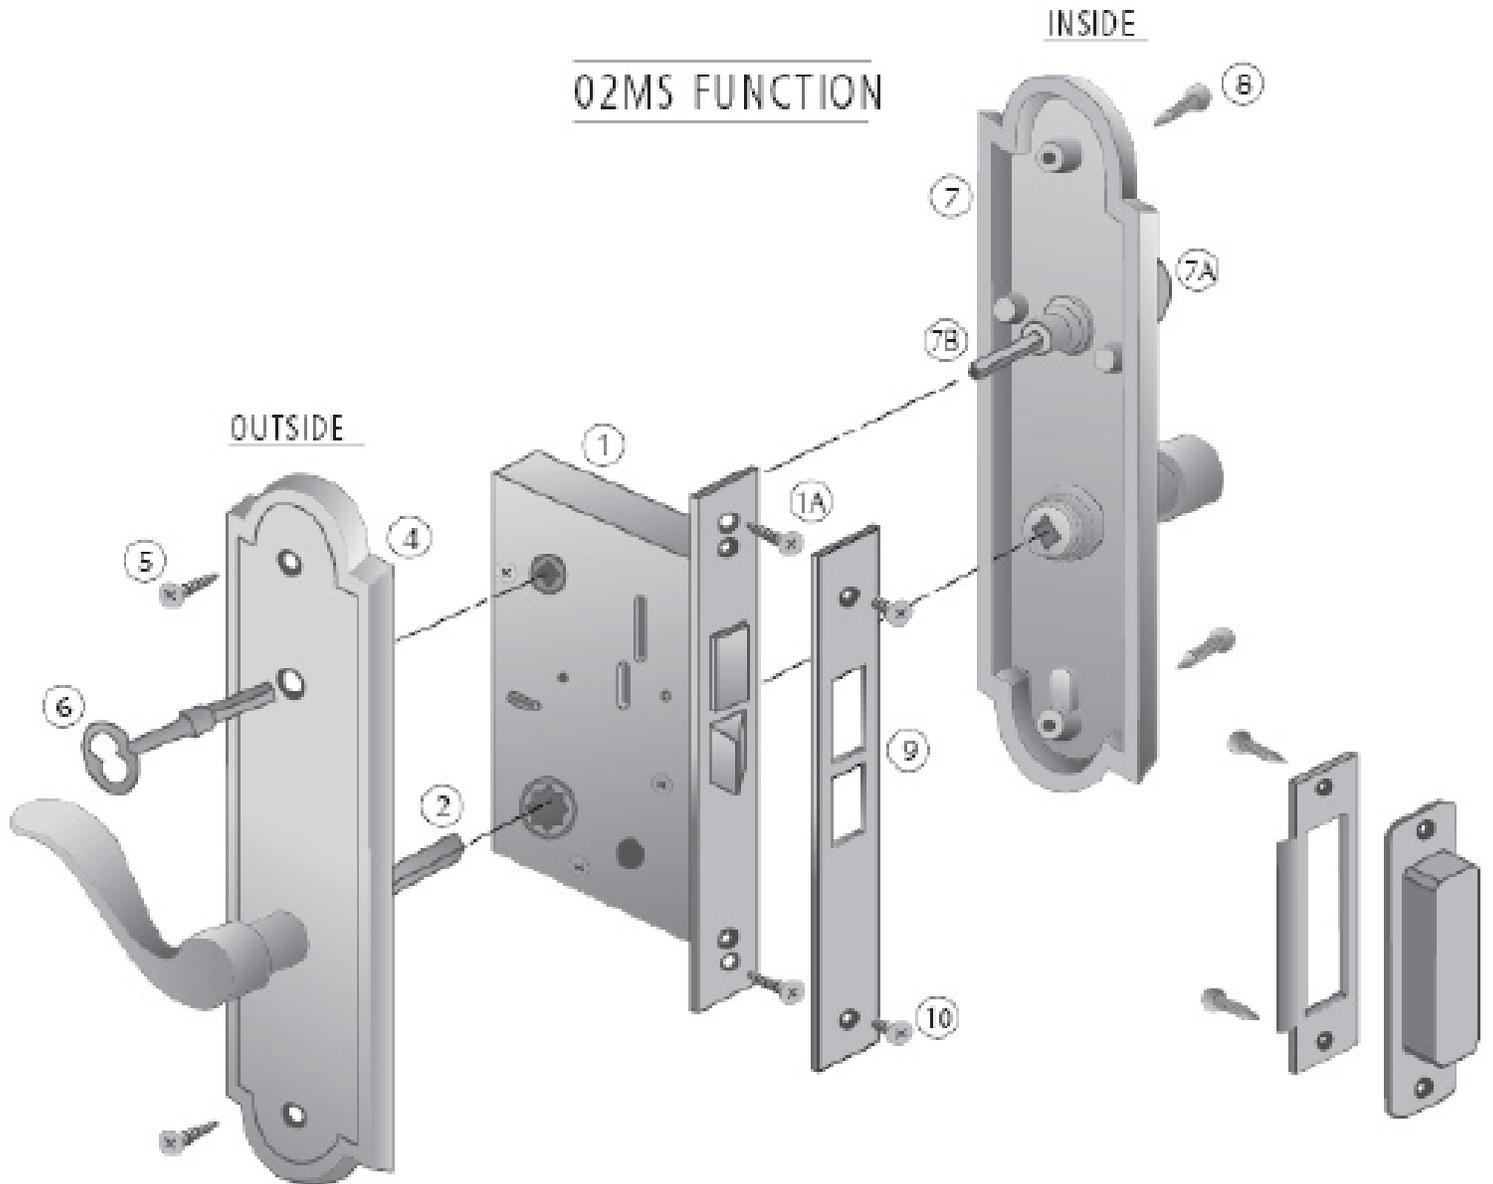

Corporate Address: 9546 Hwy 211 East - Aberdeen, NC 28315  
Mailing Address: PO Box 367 - Aberdeen, NC 28315  
Telephone: 866-635-7155  
Website: [www.longleafcollection.com](http://www.longleafcollection.com)  
Made in the USA

# INSTALLATION INSTRUCTIONS



Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

## 02MS FUNCTION

- A. Install the mortise box (1) using wood screws (1A), being careful the box is properly aligned. Pre-drill for screws using a 1/8" drill bit.
- B. Insert the spindle (2) into the hub of mortise box. Orient the spindle in the diamond position.
- C. Apply the inside trim (7) to the door. First cut the tailpiece (7B) for door condition. The tailpiece should insert 1/2 way into hub of mortise box, allowing for the key (6) to operate the bolt from outside of door. Insert spindle (2) into knob or lever keeping the diamond orientation. Align the edge of trim plate parallel with edge of door. Position the trim for free and smooth operation of the mortise box by lever/knob, and by thumbturn (7A). Fasten the trim using screws (8). We recommend using a #5 VIX bit to pilot the holes for screws. (If you don't have one, use a 3/32" drill bit.) Hand tighten the screws, as a power driver may strip them.
- D. Apply the outside trim (4) to the door. Insert the spindle (2) into knob or lever. Align edge of trim plate parallel with edge of door. Position the trim for smooth operation of the mortise box by knob/lever and by key (6). Fasten trim using screws (5), as for inside trim above. Hand tighten screws.
- E. Install armor front (9) to face of mortise box using small machine screws (10).
- F. Mount dust box and strike on the jamb. Pre-drill for screws using a 1/8" drill bit.