


INSTALLATION INSTRUCTIONS

Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

MULTI-POINT DUMMY 09FD

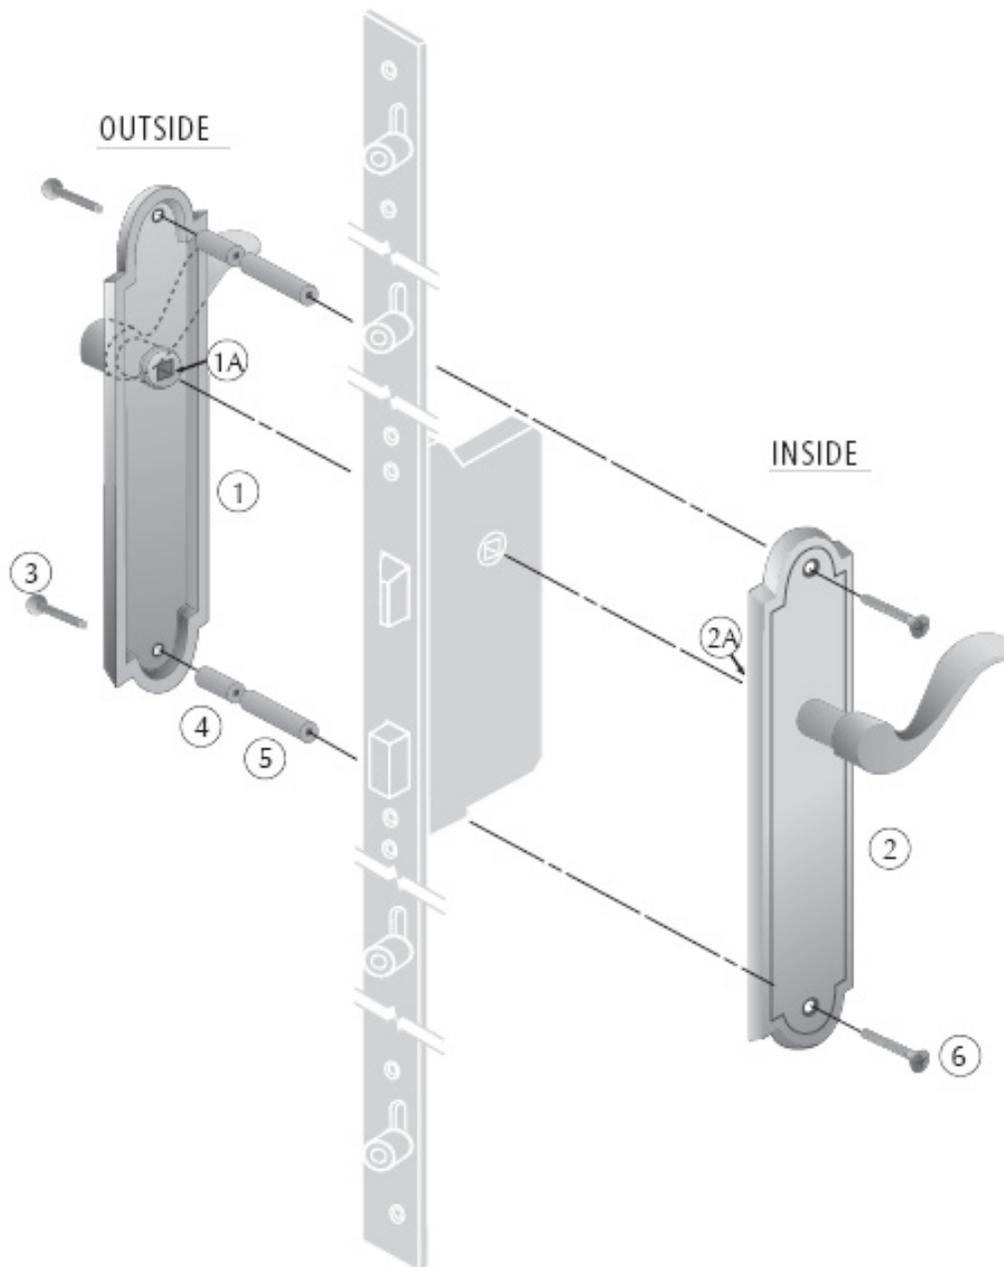

INSTALLATION INSTRUCTIONS



Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

MULTI-POINT DUMMY 09FD

Note: To ensure proper fit of trim to door, the door manufacturer must be specified when hardware is ordered. The trim sets do not include the lock mechanism or strike.

- A. Locate position of the dummy trim by aligning with active trim on the matching door.
- B. To attach plates (1 and 2) flush with the door, the door must be counter bored where the lever hubs contact the door face. To do that, while holding one of the plates on the door, make an impression of the lever hub (1A or 2A) on the door face by gently tapping the lever. (Protect the lever by using a wood block or folded cloth as an interface between the lever and your mallet.)
- C. Counter bore those hub locations on the face with a 3/4" diameter drill to a depth of 1/2".
- D. Holding the outside plate in position on the door with the edge of the plate parallel to the edge of the door, and matching the active trim on the opposite door, locate the positions for the mounting screws (3).
- E. Drill through the door with a 5/16" drill bit.
- F. Insert machine screws (3) into the outside plate, passing through the 1/2" spacers (4) and threading into the 1" threaded sleeves (5).
- G. Install the outside plate (1) onto the door, with the threaded sleeves attached, and attach the inside plate (2) by threading the machine screws (6) into the threaded sleeves.