


INSTALLATION INSTRUCTIONS



Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

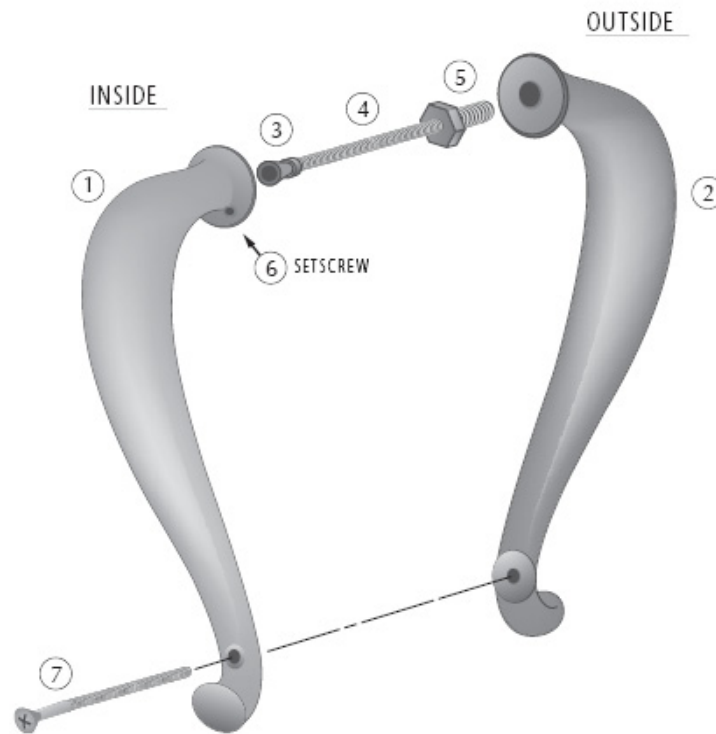

21-S AND 21-P PULL HANDLES, BACK-TO-BACK

- A. Locate position of handles on door. Pre-drill for mounting screws.
- B. For 21-P handles drill 2 holes at 9" center-to-center: drill the upper hole at 5/16" diameter, and the lower hole at 1/4" diameter.
- C. For 21-S handles drill 2 holes at 7" center-to-center: drill the upper hole at 5/16" diameter, and the lower hole at 1/4" diameter.
- D. Counter-bore the upper hole on the outside of the door at 3/4" diameter, to a depth of 1/4".
- E. Thread the bolt (5) into the outside handle (2) and tighten. Thread the 1/4"-20 rod (4) into the bolt.
- F. Hold outside handle against the door, inserting the threaded rod (4) through the upper hole. Thread the tapered nut (3) onto the rod from the inside of door. Adjust the length of threaded rod and position the nut so the nut meets the face of door.
- G. Mount the inside handle (1) to the door, fitting the flared nut into the top of the handle.
- H. Insert machine screw (7) through the inside handle and through the door, threading into the outside handle, and tighten securely.
- I. Secure the top of handle by tightening set screws(6) against the tapered nut (3), using the allen wrench included.

Corporate Address: 9546 Hwy 211 East - Aberdeen, NC 28315
Mailing Address: PO Box 367 - Aberdeen, NC 28315
Telephone: 866-635-7155
Website: www.longleafcollection.com
Made in the USA