


INSTALLATION INSTRUCTIONS



Seamless Transaction with Enhanced Product Features delivered on time and quality correct.

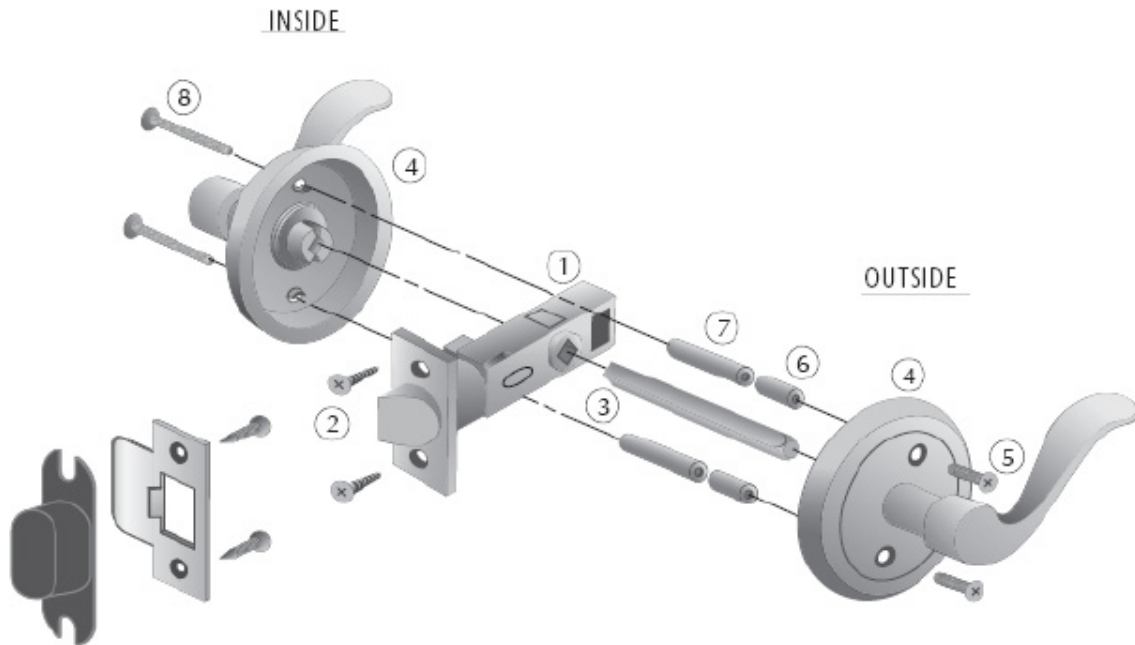

01 FUNCTION ~ 10 PLATE

LATCH:

- A. Insert the latch (1) into the edge of the bore and attach using screws (2). Pre-drill for screws using 1/8" drill bit. Make sure the bevel on the latch tongue is facing the jamb. (The latch face is removable so that the bevel can be reversed to maintain the "up" position of the latch.)
- B. Install the strike and dust box to the jamb. Pre-drill for screws as per latch.

INSTALL TRIM:

- C. Orient spindle (3) in the diamond position and push through the latch (1) hub.
- D. Place the two 1" machine screws (5) into the face plate (4) and slide the 1/2 " sleeves (6) over the screws and secure by threading into the 1" threaded stand-offs (7) and tighten. ..
- E. Install the inside and outside trim onto the spindle (3).
- F. Install the screws (8) into the threaded stand-offs (7). (The short screws are for 1-3/8" doors; the long screws are for 1-3/4" doors.)